

MCL1828LED - 18V 28LED WORKLIGHT



Item: MCL1828LED

Description: 18V 28LED WORKLIGHT

Notes: Replacing Light Panel **WARNING** The light panel is very hot after operation. Wait until it cools down before attempting replacement. **WARNING** Always remove the battery pack from handle before changing the light panel or servicing. 1. Rotate lens cap counterclockwise (see Figure 1). 2. Remove light panel from housing. 3. Disconnect the wires by separating the quick connects. 4. Connect wires of new light panel using quick connects. 5. Position new light panel. 6. Reinstall lens cap and rotate clockwise to tighten. Replacement light panel available as RSMFL28LP Replacement lens/ring set available as RSMPFLLR

Figure No	Part Number	Description	No. Reqd	Warranty Code
-----------	-------------	-------------	----------	---------------