

# AUTOMOTIVE AND HEAVY-DUTY U-JOINT PULLER

## SAFETY WARNING

Read all instructions and safety warnings prior to operation. Failure to do so could result in equipment damage, personal injury or even death.

**CAUTION:** DO NOT USE OVER 1/2" IMPACT WRENCH. DOING SO WILL VOID WARRANTY.

- **STAY ALERT!** Watch what you are doing and use common sense when operating this tool.
- Inspect product for damage prior to using; do not use if product is in unsafe condition.
- Do not operate tool while under the influence of drugs, alcohol or prescription medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the operator, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.


**NOTE:** HAMMERING THIS TOOL WILL VOID YOUR WARRANTY.

## OPERATING INSTRUCTIONS

1. Remove all bolt retainers from bearing cups.
2. Slip the U-Joint Puller over the yoke of the drive-line.
3. Turn the tools forcing screw clockwise with either an air or hand wrench. (**Note: reverse thread**)

### PREVENTATIVE MAINTENANCE

Keep forcing screw clean and lubricated at all times. Lubricate load bearing surface in glove and under cap. SAE 30 lube and EP molly grease are recommended for the threads.

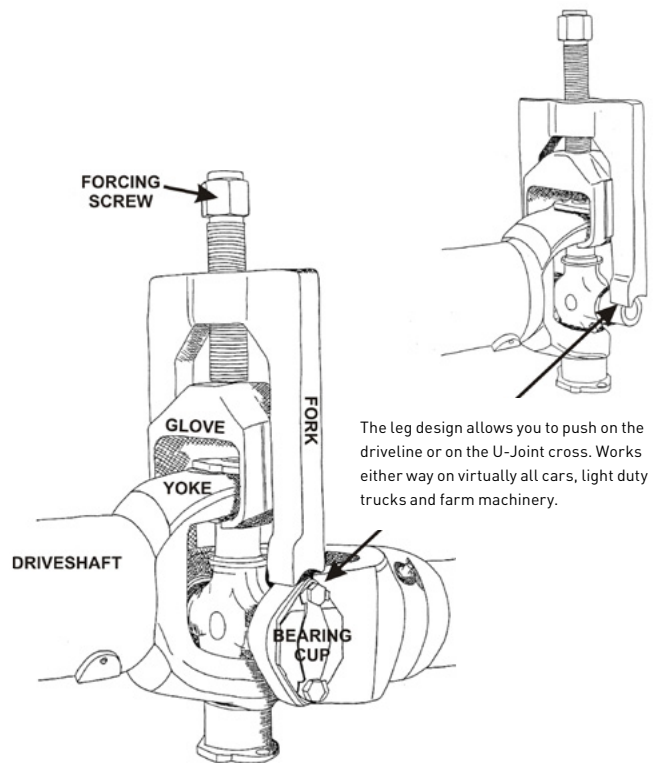

The leg design allows you to push on the driveline or on the U-Joint cross. Works either way on virtually all cars, light duty trucks and farm machinery.

