

655 Eisenhower Drive Owatonna, MN 55060-0995 USA Phone: (507) 455-7000

Tech. Serv.: (800) 533-6127 Fax: (800) 955-8329 Order Entry: (800) 533-6127

International Sales: (507) 455-7223

Fax: (507) 455-7063


Fax: (800) 283-8665

## Operating Instructions


for: 6914 6915

## **Davco Fuel Filter Wrench**

Applications: No. 6914 fits Davco Filter Model Nos. 232, 233, and 234 No. 6915 fits Davco Filter Model Nos. 382 and 384

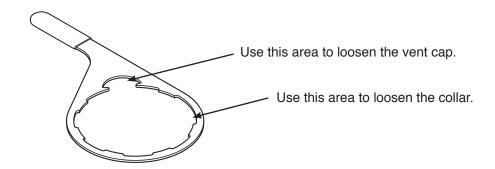

- 1. Use No. 6914 or 6915 Davco Fuel Filter Wrench to loosen and remove the vent cap.
- 2. Open the drain valve to drain fuel from the filter assembly. Close the drain valve.
- 3. Use No. 6914 or 6915 Davco Fuel Filter Wrench to loosen and remove the collar.
- 4. Remove the cover.
- 5. Remove the filter and grommet assembly, as well as the o-ring on the cover, and the o-ring on the vent cap. Dispose of these items according to the laws in your jurisdiction.
- 6. Install the new filter and grommet assembly. Install the new o-rings on the cover and vent cap.
- 7. Install the cover and **hand tighten** the collar.
  - CAUTION: Using the wrench to tighten the collar may cause damage to the cover.
- 8. Fill the filter assembly with clean fuel through the vent in the top of the cover.
- 9. Install and hand tighten the vent cap.
- 10. Start the engine and allow it to idle until stabilized and at operating temperature.
- 11. While the engine is idling, slowly open the vent cap ½ to 1 turn. The fuel level in the filter assembly will begin to drop. When the fuel level reaches to about one inch above the collar, hand tighten the vent cap.

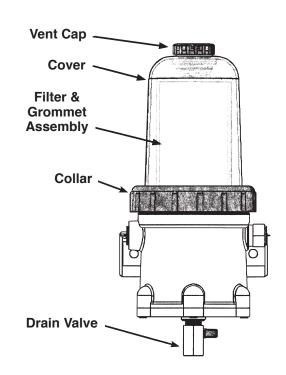



CAUTION: To prevent personal injury, wear eye protection that meets ANSI Z87.1 and OSHA standards.

Sheet No. 1 of 1

Issue Date: Rev. A September 22, 2008