




MTCOUNDBR3
MTCOUNDBR3G

BARRA DE SONIDO INALÁMBRICO
BARRE DE SON SANS-FIL

- Operating Instructions
- Warning Information
- Parts Breakdown

WIRELESS SOUNDBAR

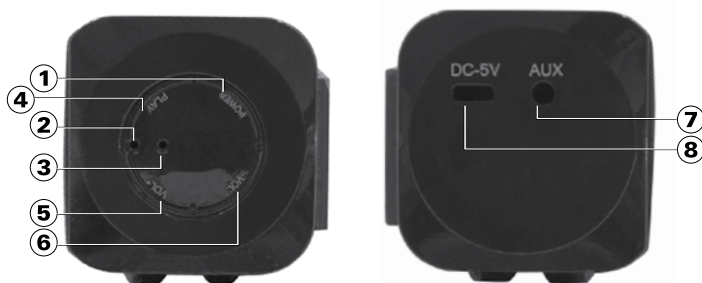

1	POWER ON/OFF	2	MICROPHONE
3	LED INDICATOR	4	PLAY
5	VOLUME +	6	VOLUME -
7	AUX INPUT	8	DC 5V 1A

Also available:

RS000476

USB-C charging cable

RSSOUNDBARAUX

Auxiliary Cable



⚠ WARNING



• Read, study, understand & follow all instructions before using. • Risk of fire, explosion and electric shock which can cause personal injury. • Magnetic forces can be harmful to personal property and equipment including cell phones, computers, diagnostic equipment and credit cards.



WARNING: This product can expose you to chemicals including phthalate which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Copyright © Professional Tool Products, 2020
All rights reserved.

WIRELESS SOUNDBAR

Output Power:	10W 2
Product Type:	Bluetooth Speaker
Bluetooth Version:	V5.0
Working Time:	About 12-14 Hours
Operating Range:	10M
Unit Size :	52mm 2
Impedance:	4 Ohm
Battery:	3.7V/6000mAh
Charging Time :	About 8 Hours
Power Supply:	DC 5V/1A
Frequency Response:	150Hz-20KHz

OPERATION

WIRELESS MODE

1. Rotate the volume knob to turn "ON" the speaker.
You will see the blue LED indicator light flashing and hear a notification sound.
2. Use your wireless device to connect and pair to: MATCOGEN3.
If need, the password is "0000".
You will see the blue LED indicator light and hear a notification sound.
3. You can now play music through the speaker.
4. If disconnected, your wireless device will connect automatically to this speaker again.

LINE IN MODE

1. To connect the speaker by stereo cable, the speaker will enter into "Line In" mode.
You will hear a notification sound, then use your device to play music.
2. It will be in "AUX" mode and you will see the blue LED indicator light.

CHARGING

1. Plug the end of the included USB-C cable into the speaker USB port and plug the other end into a USB 5V port on your computer or other USB charging device.
2. The indicator light will show red while charging and turn off once the charge is complete.

LOW POWER PROTECTION

When battery power is low, there is warning sound. Unless charged, you will hear another notification sound and the speaker will turn "OFF".

VOLUME CONTROL

When power is "ON" the default sound is at MAXIMUM. Rotate the volume knob to adjust the sound level.

PLAY MODE: BT LINE