

ROVI

PLUS

DASHCAM

RELIVE • DISCOVER • CONNECT

QUICK START GUIDE

CL-3033

BEFORE USING ROVI...



WARNING

- Never rely solely on ROVI products when driving. Always practice safe driving habits and follow all driving laws and standards. ROVI products are not a replacement for safe driving habits.
- Always survey your surrounding before driving and operating ROVI products. ROVI products are not replacements for manually checking your surroundings
- Never drive while only looking into the built-in monitors of ROVI products. The images and objects viewed from the screen will be different from the actual distance to your vehicle.
- Do not operate or change settings on any ROVI products while driving or while the vehicle is in motion. Always practice safe, hands-free, and unobstructed driving.
- Mounting and installation locations are for recommendations only. The placement recommendations may not apply to every type of vehicle. Please ensure that installation and mounting location you choose will not obstruct visibility, any safety features of the vehicle, or violate government safety standards.

 
IN THE BOX




Rovi Dashcam




Suction Mount



8GB
MicroSD Card

 

USB Car Charger

 


USB Charge
and Sync Cable



Quick Start Guide


Accessories sold separately. Available on RoviCams.com

 INSTALLATION

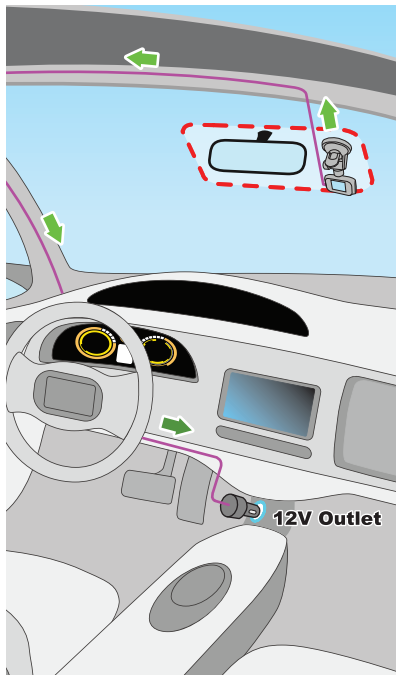


1. Insert the MicroSD card in the ROVI dashcam. Push card until it locks into place.
2. Determine mounting location (See diagram for optimal placement)
3. Attach the ROVI dashcam and the mount to the windshield.
4. Connect USB power cable to the ROVI dashcam.
5. Route cable around windshield so it is not obstructing visibility.
6. Plug the USB car charger into the 12V socket.
7. Adjust the angle of the dashcam for optimal viewing.

 BUTTON LAYOUT

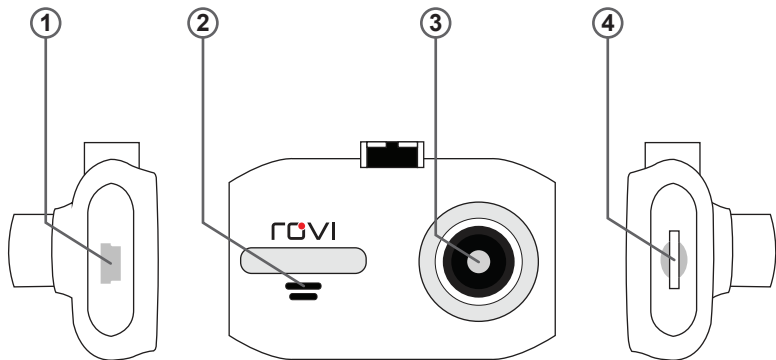

- | | |
|------------------------|--------------------|
| 1. USB Power Connector | 5. 1.5" Screen |
| 2. Speaker | 6. Microphone |
| 3. Wide Angle Lens | 7. Mount Connector |
| 4. MicroSD Card Slot | |

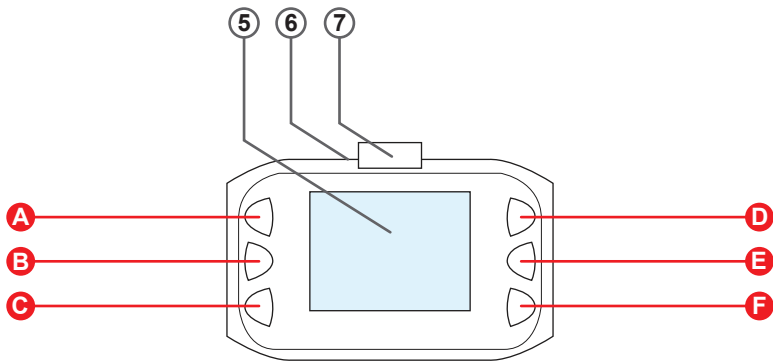 

- A** Up
- B** Menu
- C** Down
- D** OK / Select

- E** Menu
- F** Power on/off

BUTTON FEATURES

MODE

FUNCTIONS

NOT RECORDING

Zoom In
Menu
Zoom Out



Start Recording
Mode Select
Power On/Off **HOLD**

RECORDING

Zoom In
Zoom Out



Stop Recording
Lock Current Clip
Power On/Off **HOLD**

PLAYBACK

Previous File
Menu
Next File



Play / Pause Playback
Mode Select
Power On/Off **HOLD**

PHOTO

Zoom In
Menu
Zoom Out



Take Photo
Mode Select
Power On/Off **HOLD**

MENU

Up
Menu Toggle
Down




OK / Confirm
Mode Select
Power On/Off **HOLD**


SPECIFICATIONS

Lens	120° Wide Angle
LCD	1.5" TFT LCD
Resolution/FPS	MAX 1080p @25fps, 720p @30fps
Languages	English, Français (French), Español (Spanish), Português (Portuguese), Deutsch (German), Italiano (Italian), 简体中文 (Simplified Chinese), 繁體中文 (Traditional Chinese), русский (Russian), 日本語 (Japanese), 한국어 (Korean)
Battery	Built-In, Rechargeable
Storage	MAX: 32GB micro SD (Class 10 Required)
TV Standard	NTSC/PAL
Security Application	G-sensor / Motion detection

MENU LIST

VIDEO RECORDING SETTINGS

 VIDEO RESOLUTION
1080 FHD 1920x1080
1080p 1440x1080
720p 1280x720
WVGA 848x480
VGA 640x460
QVGA 320x240

 LOOP RECORDING
OFF
1 Minute
2 Minutes
3 Minutes

 EXPOSURE	
+ 0.0	
+2.0	-1/3
+5/3	-2/3
+4/3	-1.0
+1.0	-4/3
+2/3	-5/3
+1/3	-2.0




 MOTION DETECTION
OFF
ON


PHOTO SETTINGS


 TIMER
Single
2 Second Timer
5 Second Timer
10 Second Timer


 RESOLUTION
12M 4032x3024
10M 3648x2736
8M 3264x2448
5M 2592x1944
3M 2048x1536
2M 1920x1080
1.3M 1280x960


 SEQUENCE
OFF
ON


 QUALITY
Fine
Normal
Economy


 RECORD AUDIO
OFF
ON


 DATE STAMP
OFF
ON


 G-SENSOR SENSITIVITY
OFF
2G
4G
8G


 BUTTON SOUND
OFF
ON


 SHARPNESS
Strong
Normal
Soft


 WHITE BALANCE
Auto
Daylight
Cloudy
Tungsten
Fluorescent


 COLOR
Color
Black & White
Sepia

 ISO
Auto
100
200
400

 EXPOSURE	
+ 0.0	
+2.0	-1/3
+5/3	-2/3
+4/3	-1.0
+1.0	-4/3
+2/3	-5/3
+1/3	-2.0


 ANTI-SHAKING
OFF
ON

 QUICK REVIEW
OFF
2 Seconds
5 Seconds

 DATE STAMP
OFF
Date

SYSTEM SETTINGS

 DATE / TIME
Manual Input

 AUTO POWER OFF
OFF
1 Minute
3 Minutes

 LANGUAGES	
English	
繁體中文 (Traditional Chinese)	Español (Spanish)
简体中文 (Simplified Chinese)	Français (French)
日本語 (Japanese)	Italiano (Italian)
русский (Russian)	Português (Portuguese)
Deutsch (German)	한국어 (Korean)

 DEFAULT SETTINGS
Restore Defaults

 VERSION
Firmware Version

**LIGHT
FREQUENCY**

50 Hz

60 Hz

**SCREEN
SAVER**

OFF

3 Minute

5 Minutes

5 Minutes

**IMAGE ROTATION**

OFF

ON

**FORMAT**

Format SD Card

**THANK YOU FOR CHOOSING ROVI.
ENHANCE YOUR DRIVING EXPERIENCE.**



**FOR IMMEDIATE HELP AND SUPPORT,
AS WELL AS HOW-TO VIDEOS, PLEASE VISIT**

rovicams.com