



DASHCAM RELIVE • DISCOVER • CONNECT

QUICK START GUIDE

CL-6000/6001

BEFORE USING ROVI...



- Never rely solely on ROVI products when driving. Always practice safe driving habits and follow all driving laws and standards. ROVI products are not a replacement for safe driving habits.
- Always survey your surrounding before driving and operating ROVI products. ROVI products are not replacements for manually checking your surroundings
- Never drive while only looking into the built-in monitors of ROVI products. The images and objects viewed from the screen will be different from the actual distance to your vehicle.
- Do not operate or change settings on any ROVI products while driving or while the vehicle is in motion. Always practice safe, hands-free, and unobstructed driving.
- Mounting and installation locations are for recommendations only. The placement recommendations may not apply to every type of vehicle. Please ensure that installation and mounting location you choose will not obstruct visibility, any safety features of the vehicle, or violate government safety standards.

IN THE BOX



Accessories sold separately. Available on RoviCams.com

INSTALLATION



- Insert the MicroSD card in the ROVI dashcam. Push card until it locks into place.
- Determine mounting location (See diagram for optimal placement)
- Connect USB power cable to the magnetic mount and plug the USB car charger to the 12V socket.
- 4. Route cable around windshield so it is not obstructing visibility.
- 5. Attach the ROVI dash camera to the mount.
- 6. Adjust the angle of the mount for optimal viewing.

BUTTON LAYOUT







- A Power / OK
- B Menu / Mode
- 🕒 Up
- D Down

- 1. Reset Button
- 2. Microphone
- 3. GPS Connector 8. 1.5" Screen
- 4. MicroSD Card Slot
- 5. Magnetic Connector

- 6. Wide Angle Lens
- 7. Tempered Glass
- 9. Status Light

BUTTON FEATURES

MODE

FUNCTIONS

NOT RECORDING	Start / Stop Recording PRESS Setup Menu HOLD Mode Switch Between	Zoom In PRESS Flip Screen Hold
	Dashcam / Photo / Playback	Wi-Fi Mode Hold

RECORDING	Start / Stop Recording	Zoom In
RECORDING	Protect Current Recording	Zoom Out

PLAYBACK	Play / Pause Previous File
	Options 🛛 Next File

рното	Take Photo Zoom In
	Setup Menu 🛛 Zoom Out

MENU	Select Up
	Toggle Between Menus Down

SPECIFICATIONS

Chipsets	NT96658
Sensor	SONY IMX322
Lens	F/2.0 150° Diagonal Viewing Angle 6 layer glass + IR
Spectacles	Optical coating tempered glass
LCD	1.5" 480 x 240 resolution
Resolution/FPS	1080p / 30fps ,720p / 60fps
Battery	Built-in polymer Li-ion battery
Loudspeaker	8Ω 0.5W
Storage	MAX: 64GB micro SD
Image Technology	H.264 / .MOV / 4X digital zoom / Wide Dynamic Range (WDR)
Security Application	G-sensor / Motion detection / LDWS / Parking monitor
Mount Features	Quick removal / Magnetic power connector / Adjustable angle
Working Temperature	- 20°C ~ 70°C

WI-FI APP SETUP

- 1. Download ROVI app from the App Store (iOS) or Google Play (Android).
- On the ROVI dashcam, turn on Wi-Fi Mode by going into the settings menu or holding the down arrow while not recording.
- On your mobile device, go to Wi-Fi Settings and select the dashcam SSID and enter the default password (12345678) displayed on the dashcam screen. (fig.1)
- 4. Once connected, the dashcam screen will show a Wi-Fi icon at the bottom left corner. (fig.2)
- 5. Open the ROVI app.

fig.1



fig.2



GPS SETUP

GPS MODULE INSTALLATION

- 1. Connect the GPS Module magnetic connector to the ROVI dashcam. (fig.3)
- 2. Attach GPS Module unit to the right side of the magnetic mount. (fig.4)
- The ROVI dashcam will automatically recognize the GPS Module and automatically searches for the GPS signal.
- 4. Recorded videos will automatically be embedded with GPS coordinates.

ANGLE LOCK RELEASE BUTTON fig.4 GPS MODULE HERE fig.3 MAGNETIC CONNECTOR

TO ACCESS GPS INFORMATION

- 1. Download and install Windows desktop Driving Recorder Player from RoviCams.com.
- 2. Download dashcam video with GPS information via the desktop app.
- 3. Play the recorded video.
- 4. The application will play the video and show location information.

VIDEO RECORDING SETTINGS

		WIDE DYNAMIC RANGE	EX	POSURE
1080 FHD 1920x1080	OFF	OFF	+ 0.0	
720p 1280x720	3 Minutes	s ON		-1/3
WVGA 848x480	5 Minutes		+5/3	-2/3
VGA 640x460	10 Minutes		+4/3	-1.0
			+1.0	-4/3

+2/3

+1/3

-5/3

-2.0

PHOTO SETTINGS

CAPTURE MODE	PHOTO RESOLUTION	SEQUENCE	
Single	12M 4032x3024	OFF	Superior
2 Second Timer	10M 3648x2736	ON	Normal
5 Second Timer	8M 3264x2448		Economy
10 Second Timer	5M 2592x1944		
	3M 2048x1536		
	2M 1920x1080		
	1.3M 1280x960		

	1	RECORD AUDIO	0	PARKING MONITOR	10 Mar	LANE DEPARTURE WARNING SYSTEM
OFF		OFF		OFF		OFF
ON		ON	ON			ON

SHARPNESS		COLOR	ISO ISO	EX	POSURE
Strong	Auto	Color	Auto	+ (0.0
Normal	Daylight	Black & White	Black & White 100		-1/3
Soft	Cloudy	Sepia	200	+5/3	-2/3
	Tungsten		400	+4/3	-1.0
	Fluorescent			+1.0	-4/3
				+2/3	-5/3

+1/3

-2.0

DATE STAMP	
OFF	OFF
ON	High
	Middle
	Low



SYSTEM SETTINGS

🤿 WI-FI	DATE / TIME		ВЕЕР		P	LANGUAGES
OFF	Manual Input		OFF			English
ON		ON			Français (French)	
						Español (Spanish)
					P	ortuguês (Portuguese)
						Deutsch (German)
						Italiano (Italian)
					简体	中文 (Simplified Chinese)
	SCREEN		LICENSE		繁體	中文 (Traditional Chinese)
HZ FREQUENCY	SAVER		PLATE			русский (Russian)
50 Hz	OFF		Manual Input			日本語 (Japanese)
60 Hz	1 Minute					ไทย (Thai)
	3 Minutes					
	5 Minutes					



THANK YOU FOR CHOOSING ROVI.

ENHANCE YOUR DRIVING EXPERIENCE.



FOR IMMEDIATE HELP AND SUPPORT, AS WELL AS HOW-TO VIDEOS, PLEASE VISIT

rovicams.com